

List of electrical components

letter and figure within brackets indicate the square in which the component is placed

<p>1 Bulb, direction indicators (A1)</p> <p>2 Bulb, parking lights (A1)</p> <p>3 Bulb, fullbeams and dipped beams (A1)</p> <p>4 Windscreen wipers (A1)</p> <p>5 Relay, headlight flasher (A2)</p> <p>6 Relay, parking lights (A2)</p> <p>7 Relay, fullbeams and dipped beams (A2)</p> <p>8 Relay, headlamp wipers (A2)</p> <p>9 Horn button (A2)</p> <p>10 Horn (A2)</p> <p>11 Headlamp wiper (A3)</p> <p>12 Headlamp wiper (A3)</p> <p>13 Headlamp washers (A3)</p> <p>14 Relay, windscreen wiper (A3)</p> <p>15 Relay, windscreen wiper (A3)</p> <p>16 Relay, windscreen wiper (A3)</p> <p>17 Windscreen washers (A3)</p> <p>18 Windscreen wiper (A3)</p> <p>19 Relay, windscreen wipers (A3)</p> <p>20 Bulb, fullbeams and dipped beams (A4)</p> <p>21 Bulb, parking light (A4)</p> <p>22 Bulb, direction indicator (A4)</p> <p>23 Fan motor, extra (B2)</p> <p>24 Switch, fan motor (B2)</p> <p>27 Fan motor (B2)</p> <p>28 Contact, front-wheel drive (B2)</p> <p>29 Contact, brake pedal movement (B2)</p> <p>30 Warning light, battery charging (B3)</p> <p>31 Warning light, oil pressure (B3)</p> <p>32 Warning light, brakes (B3)</p> <p>33 Rheostat (B3)</p> <p>34 Indicator light, fullbeams (B3)</p> <p>35 Coolant temperature gauge (B3)</p> <p>36 Indicator light, direction indicator (B3)</p> <p>37 Flasher device (B3)</p> <p>38 Indicator light, direction indicator (B3)</p> <p>39 Speedometer (B3)</p> <p>40 Fuel gauge (B4)</p> <p>41 Switch, windscreen wash (B4)</p> <p>42 Switch, hazard warning lights (B4)</p> <p>43 Switch, headlamp wipers (B4)</p> <p>44 Switch, windscreen wiper (B4)</p> <p>45 Switch, windscreen wiper (B4)</p> <p>46 Switch, lights (B4)</p> <p>47 Ignition socket (C1)</p> <p>48 Brake light contact (C2)</p> <p>49 Direction indicator stalk (C2)</p> <p>50 Relay, reversing lights (D2)</p> <p>51 Contact, brake circuit (D2)</p> <p>52 Spark plugs (D2)</p> <p>53umper resistance (D2)</p> <p>54 Contact, differential lock (C3)</p> <p>55 Contact, differential lock (C3)</p> <p>56 Indicator light, differential lock (C4)</p> <p>57 Sender, coolant temperature gauge (C4)</p> <p>58 Indicator light, differential lock (C4)</p> <p>59 Indicator light, front-wheel drive (C4)</p> <p>60 Ignition switch (C4)</p> <p>61 Fuel level sender (D1)</p> <p>62 Console, connector (D1)</p> <p>63 Console, connector (D1)</p>	<p>64 Reversing light contact (D2)</p> <p>65 Contact, parking brake (D2)</p> <p>66 Starter motor (D2)</p> <p>67 Battery (D2)</p> <p>68 Distributor (D3)</p> <p>69 Capacitor (D3)</p> <p>70 Ignition coil (D3)</p> <p>71 Charging regulator (D3)</p> <p>72 Alternator (D3)</p> <p>73 Contact, oil pressure (D3)</p> <p>74 Contact, front-wheel drive (D4)</p> <p>75 Contact, front-wheel drive (D4)</p> <p>76 Solenoid valve (D4)</p> <p>77 Switch, interior lighting (D4)</p> <p>78 Bulb, interior light (D4)</p> <p>79 Bulb, tail light (E1)</p> <p>80 Bulb, direction indicator (E1)</p> <p>81 Bulb, stop lights (E1)</p> <p>82 Trailer contact (E3)</p> <p>83 Bulb, reversing lights (E4)</p> <p>84 Bulb, tail light (E4)</p> <p>85 Bulb, direction indicator (E4)</p> <p>86 Bulb, stop light (E4)</p>	<p>25 Fuse Block (B1)</p> <p>26 Fuse Block (B2)</p>
---	---	---

